

Fig.1

Figure 1 is a perspective view of a handheld electronic device 10. The device 10 includes a display screen 12 and a control panel 14. The control panel 14 includes a set of five circular buttons 16 and a central rectangular button 18 with two triangular symbols. The device 10 is shown from a perspective view.

FIG. 2 is a perspective view of the device 10 in an open position, showing the interior of the device 10. The device 10 includes a main display 18, a touch screen 16, and a control panel 12. The main display 18 displays the word "MAIN" and a dashed line. The touch screen 16 is located below the main display 18. The control panel 12 is located on the right side of the device 10 and includes four circular buttons and a directional pad.

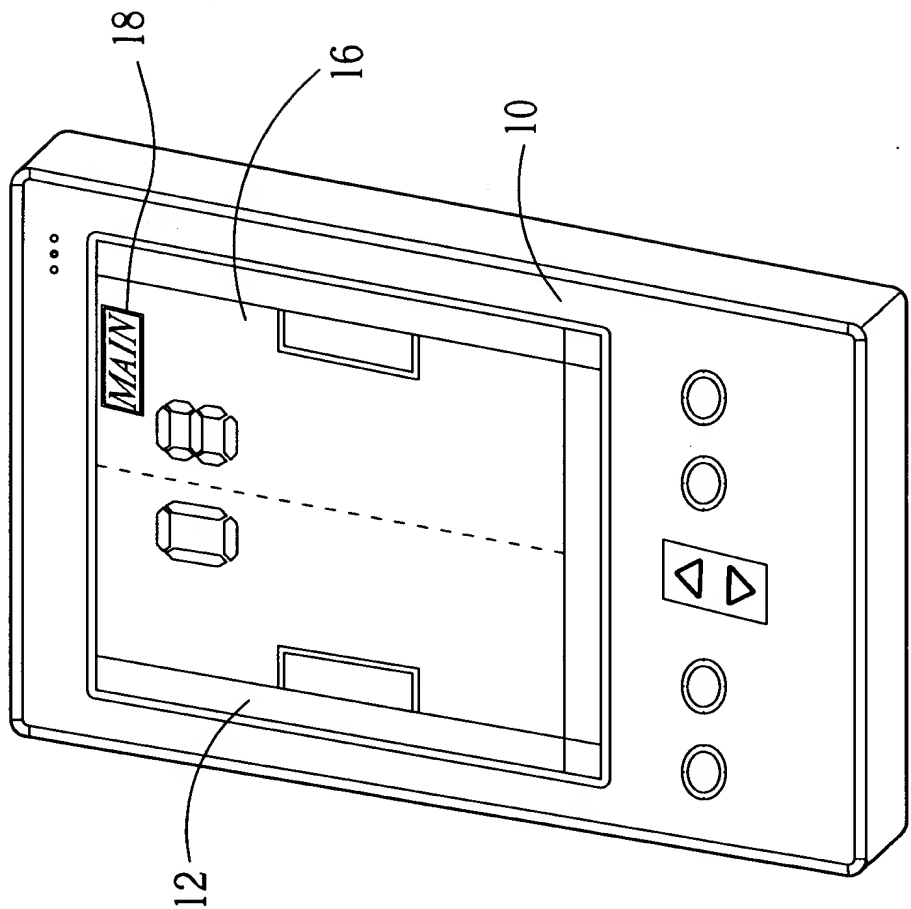


Fig. 2

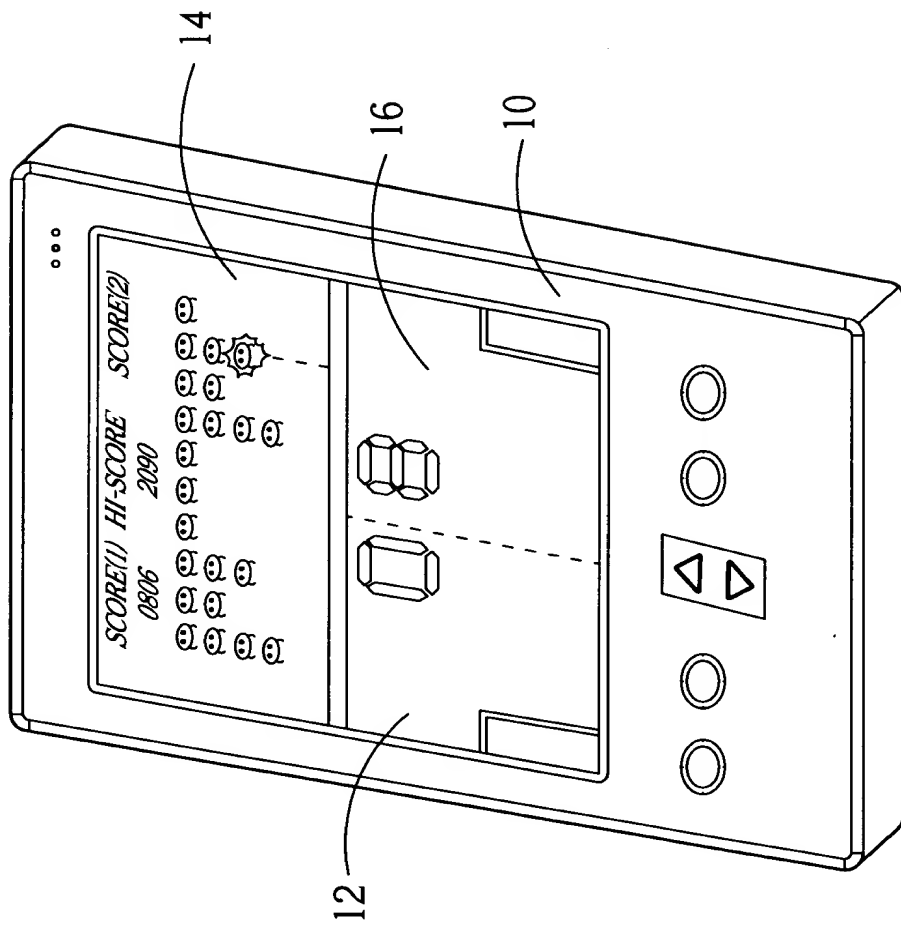


Fig. 3

FIG. 4 is a perspective view of the device 10 in a closed position. The device 10 is a rectangular box with a front face 12 and a top face 14. The front face 12 features a display screen 10 and a control panel 12. The display screen 10 shows the text "SCORE(1) HI-SCORE SCORE(2)" at the top, followed by "0806 2090". Below this, there are two rows of ten small square icons each. A dashed line connects the top-right icon of the first row to the top-right icon of the second row. The control panel 12 includes a "CREDIT 01" label, a "3" label, and a "CREDIT 01" label. There are also four circular buttons and a rectangular button with left and right arrow symbols.

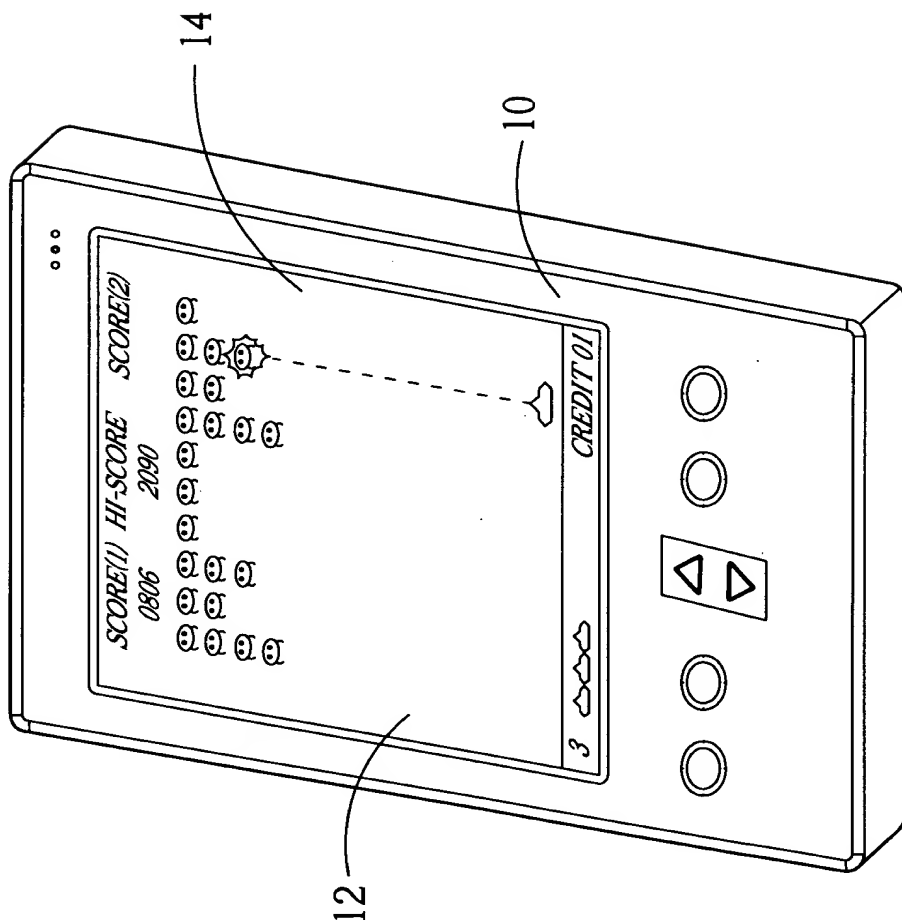


Fig. 4